




Wall Cabinet Assembly Instructions

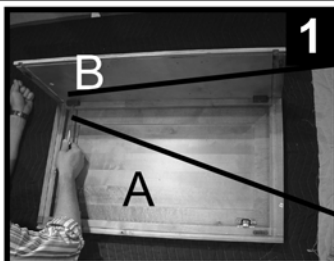


1
Lay front panel face-down on a non-marring surface. Push side panel (B) into slot on Front panel (A) making sure that cams connect properly.

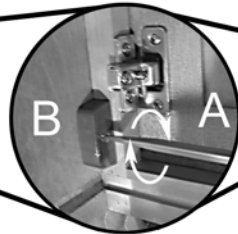


Cam lock detail.
(Turn until cam stops.)

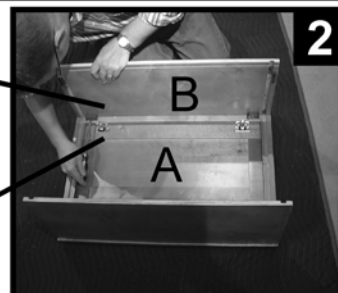


2
Insert second side panel (B) into slot on front panel (A) and Tighten Cam locks with a flat-head screwdriver.

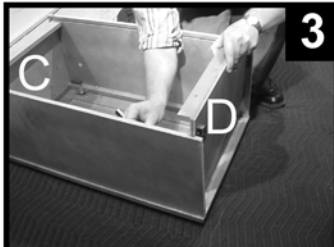

3
Slide Top (C) and bottom (D) into grooves in sides (B) making sure cam locks are aligned. Lock cams as in steps 1 & 2.

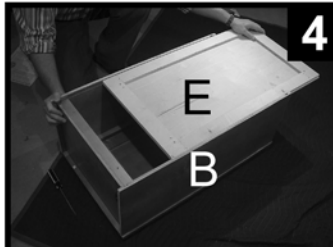

4
Insert back panel (E) into grooves in side panels (B).

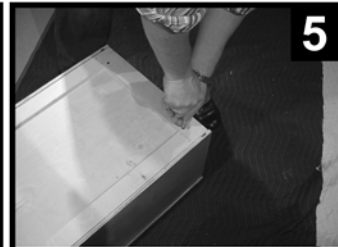

5
Secure back panel (E) on 4 corners with wood screws.



6
Insert shelf supports into holes on inside of sides (B). Shelves can be adjusted as desired by moving supports.



Cabinet is ready for installation!

NORBRIDGE
Quality Wood Cabinets